

Name of Each Part

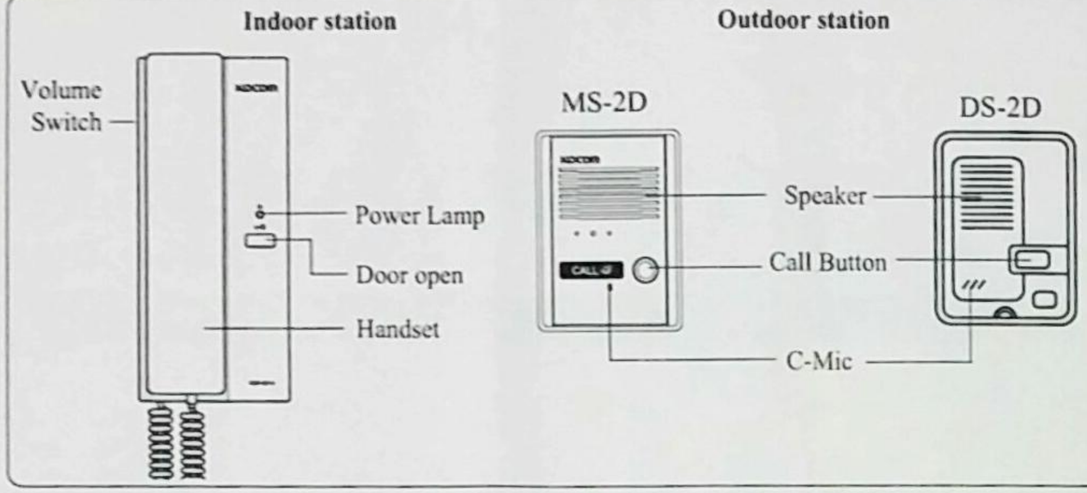


How to operate (Instruction for operating)

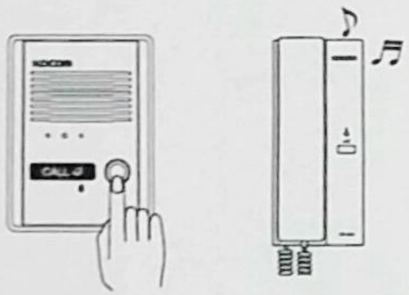

When a visitor pushes the outdoor station bell.

The indoor station is ringing.

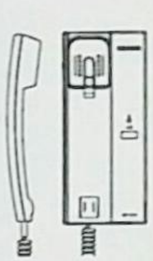



Pick up the handset and communicate with a visitor. After end of communication, return the handset where it is locked.



To release the door, press the "Door open" button.


Wring Diagram

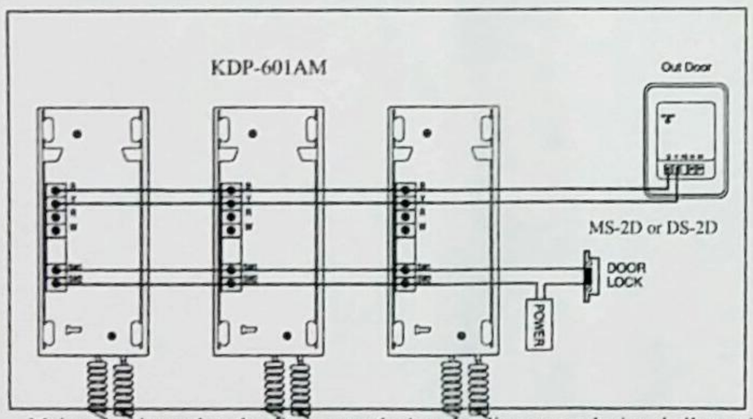

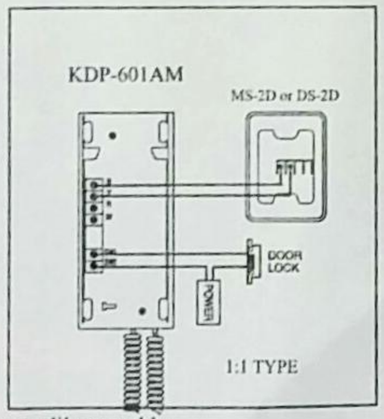


- Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Wiring Diagram

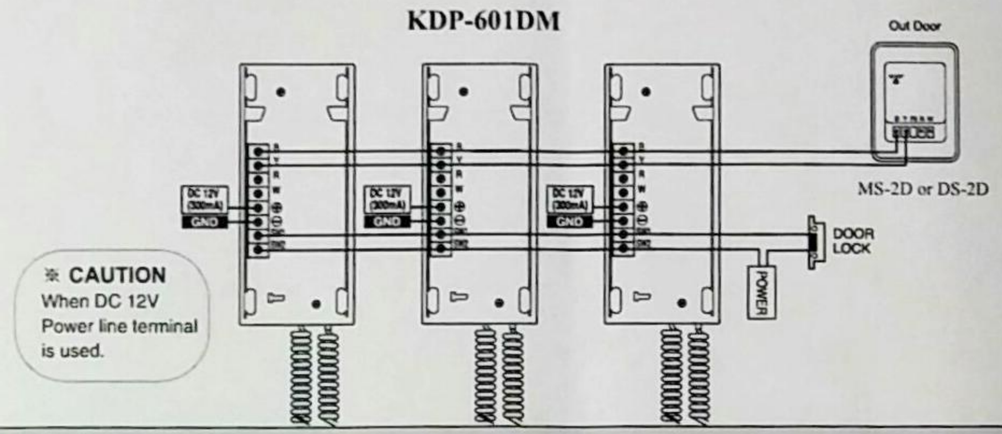


Installation

Installation of Indoor station

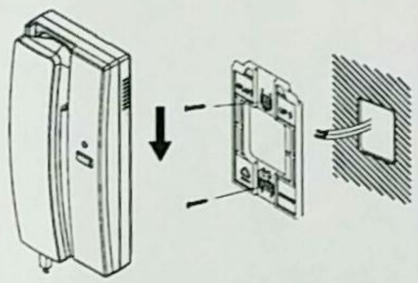

A - Choose a place on the wall where you want to hang the Indoor station.
B - Fasten the wall hanger on the wall.
C - Indoor station can be hung on the wall hanger easily now.

Installation of outdoor station

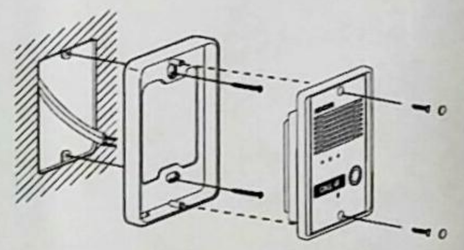

After attaching the body supporter with 2screws, put the indoorstation into the grooves of body supporter,and then fix it with screws.

Specifications

Description	KDP-601AM	KDP-601DM
Electric source	AC 110V / AC220V (Saudi arabia) : 220V	BATTERY: 6V⎓ (4 Piece of 1.5V batteries) LINE TERMINAL: 12V⎓ / 300mA
Consumption	Un load: 0.5W Inload: 5W	Un load: 0.25mW Inload: 1.3W
Signal Sound	Chime	Chime
Wiring	2Wired polarity	2Wired polarity
Range	300m(ϕ 0.65mm)	300m(ϕ 0.65mm)

Component

■ Master station for indoor-use ■ Out door pannel ■ Wall hanger for master station